


Formaldehyde emission from glued laminate timber according to the European chamber method EN 14080

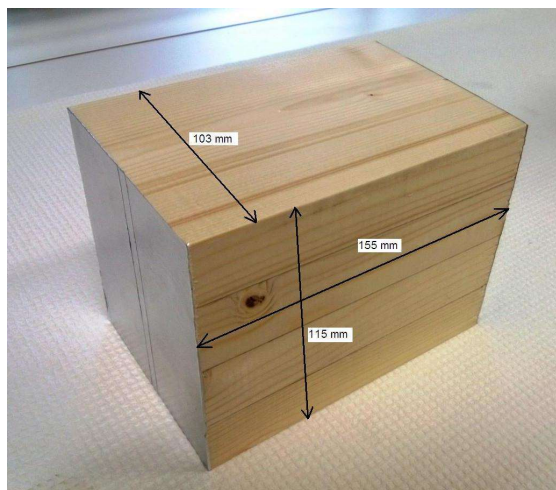

Chambers	225 L, stainless steel
Loading factor	0,3 m ² per m ³ chamber volume
Optional; Open glue line	4,136 m per m ³ chamber volume
Sample specimen size	1 x (103 x 115 x 103) mm or other dimensions that fulfill the requirements above
Edge sealing	The ends of the specimen shall be sealed with aluminum tape
Temperature	(23,0 ± 0,5) °C
Humidity	(45 ± 3) % RH
Air exchange	1/hour
Conditioning	No
Test duration	Until steady state, minimum 10, maximum 28 days
Limit of quantification	0.003 mg/m ³